
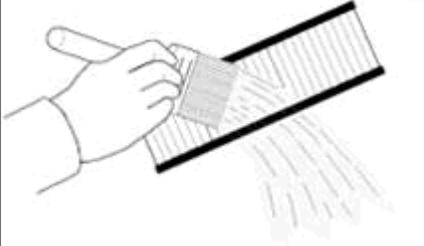


AIRAID Premium Filter Cleaning Instructions


You Can Feel the Power in the Air!

 <p>1. PRE-CLEANING</p> <p>Tap the element to dislodge any lodge embedded dirt, then gently brush with a soft bristle brush. (Note: If complete cleaning is not practical at this time, re-oil the element and re-install in your vehicle.)</p>	 <p>2. SPRAY ON CLEANER</p> <p>Spray AIRAID air filter cleaner liberally onto the entire element and let soak for 10 minutes.</p>	 <p>3. PAN CLEANING</p> <p>Large AIRAID elements can be rolled or soaked in a shallow pan of AIRAID air filter cleaner. Remove immediately and let sit for approximately 10 minutes.</p>
<p>4. CLEANING HINTS</p> <p>Use only AIRAID air filter cleaner. NO gasoline cleaning. NO steam cleaning. NO caustic cleaning solution. NO strong detergents. NO high pressure car wash. NO parts cleaning solvents.</p> <p>Any of these NO's can cause harm to the gauze filter media, plus shrink and harden the rubber end caps.</p>	 <p>5. RINSE OFF</p> <p>Rinse off the element with low water pressure, tap water is OK. Always flush from the clean side to dirty side. This removes the dirt and does not drive it into the filter.</p>	<p>6. DRYING HINTS</p> <p>Always dry naturally. After rinsing, shake off all excess water and let the element dry naturally.</p> <p>DO NOT use compressed air. DO NOT use open flame. DO NOT use heat dryers.</p> <p>Excess heat will shrink the cotton filter media. Compressed air will blow holes in the element.</p>

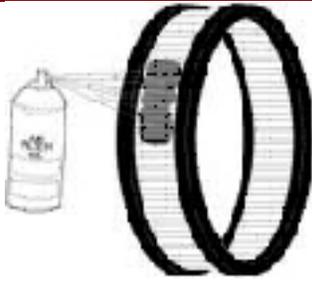

7. AEROSOL OILING

After cleaning air filter always re-oil before using. Spray AIRAID air filter oil down into each pleat with one pass per pleat. Wait 10 minutes and re-oil any white spots still showing.

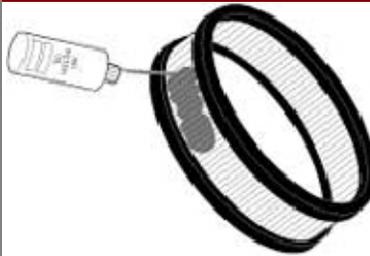


8. SQUEEZE BOTTLE OILING

After cleaning air filter always re-oil before using. Squeeze AIRAID air filter oil down into the bottom and along each pleat in only one pass per pleat. Let oil wick into cotton for 20 minutes. Re-oil any white spots still showing.

9. OILING HINTS

Never use an AIRAID air filter without oiling. (The filter will not stop the dirt without the oil.) Use only AIRAID formulated air filter oil. AIRAID air filter oil is a compound of mineral oil blended with special polymers to form a very efficient tack barrier. Red dye is added to show just where you have applied the oil. Eventually the red color will fade but the oil will remain and filter the air.

NEVER USE Automatic Transmission Fluid
NEVER USE Motor Oil **NEVER USE** Diesel Fuel **NEVER USE** WD-40, LPS, or other light weight oils.

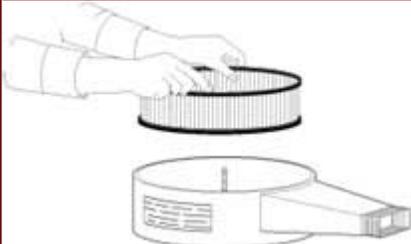

10. REINSTALL

Re-install your AIRAID air filter element with proper care. Make sure the element seats properly in the filter case. Install the cover making sure it's in the right position. Tighten all the nuts, bolts, screws or clips to factory specifications.

11. DO NOT DISCARD

Affix the "Do Not Discard" sticker to the filter case. Make sure you put the sticker in a highly visible place to alert your mechanic not to discard.

12. PERFORMANCE HINTS

- 1) Service every 25,000 miles on street driven applications.
- 2) Service often in off-road or heavy dust conditions.
- 3) Let the dirt "build-up" work for you; it will not hurt the performance and actually help filter the air.

CAUTION:

Extreme fine dust in agriculture or off-road use will pull the oil from the element. Frequent re-oiling of the element's clean side might be required. Completely service when practicable