



 
RUE-4360

Remote Control Unit

Owner's Manual Mode d'emploi

CONTROLS ON REMOTE CONTROL

- ① **Power Button**
Press the button to turn the power on/off.
- ② **Source Button**
Press to select the audio source.
- ③ **Volume Up Button**
Press the button to increase the volume level.
- ④ **Subwoofer Level Buttons**
Press '+' to increase and '-' to decrease the subwoofer level.
- ⑤ **Volume Down Button**
Press the button to decrease the volume level.
- ⑥ **▲ Button**
Radio Mode: Next Preset
USB/ MP3 Mode: Folder Up
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the AUDIO P. button.
- ⑦ **◀◀ Button**
Press to seek down a station in radio mode or down a track, chapter, etc., in other audio/visual sources.
- ⑧ **Repeat Button**
USB/ MP3 Mode: Press the button to repeat the current track.
- ⑨ **Voice Button**
Depending on the connected smartphone, press to recall Siri function or voice recognition mode.
- ⑩ **Mute Button**
Press to activate/deactivate the mute mode.
- ⑪ **Band Button**
Radio Mode: Toggle Band.
- ⑫ **Pick Up Button**
Press the button to accept an incoming phone call.

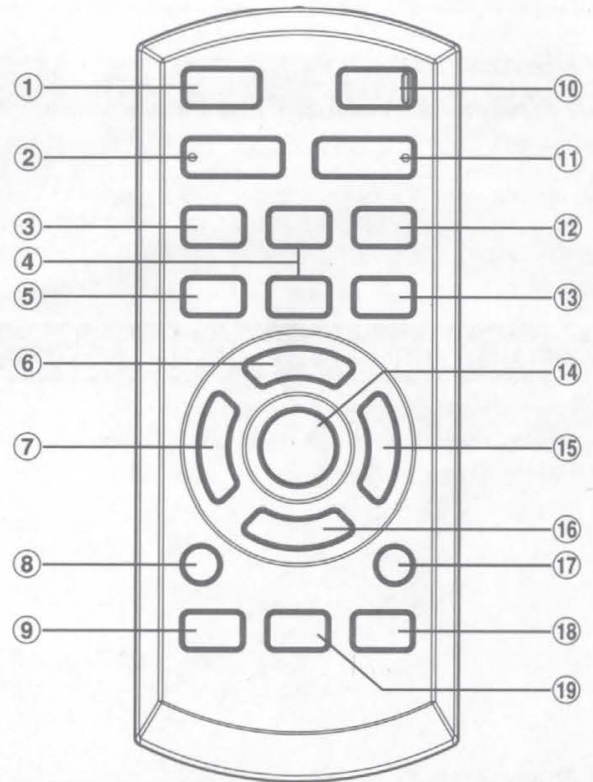

- ⑬ **Hang Up Button**
Press the button to reject an incoming phone call or to end a phone call.
- ⑭ **▶ / || Button**
Press the button to switch between the Play and Pause modes for USB/ MP3 playback.
- ⑮ **▶▶| Button**
Press to seek up a station in radio mode or up a track, chapter, etc., in other audio/visual sources.
- ⑯ **▼ Button**
Radio Mode: Previous Preset
USB/ MP3 Mode: Folder Down
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the AUDIO P. button.
- ⑰ **M.I.X. Button**
USB/ MP3 Mode: Random playback order of tracks.
- ⑱ **Audio Processor Button**
Each press of the button changes the external audio processor mode.
Press ▲ or ▼ button to perform setting / adjustment.*1

*1 For the operation of external audio processor, refer to the Owners Manual of the external audio processor you purchased.

- ⑲ **Defeat Button**
Press the button to toggle defeat on/off.

• Depending on the device you are using, you cannot operate or may need to operate differently some devices on the remote control.
For details, refer to the Owners Manual of the device you purchased.

HANDLING PRECAUTIONS

⚠ WARNING: Do not ingest battery, Chemical Burn Hazard.

The remote commander contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

Do not drop or apply shock to the unit. It may be get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust.

Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.

Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.

Do not operate this unit in a manner that could distract you from driving safely.

 
SPECIFICATIONS

Battery Type.....CR2025 button cell
 Battery Quantity1
 Dimensions (W x H x D)..... 42 x 101 x 15mm
 (1-21/32"x4"x19/32"
 Weight (without battery)..... 34g (1.2 oz)

BATTERY REPLACEMENT


① Opening the battery tray

Release the hook and remove the battery tray.

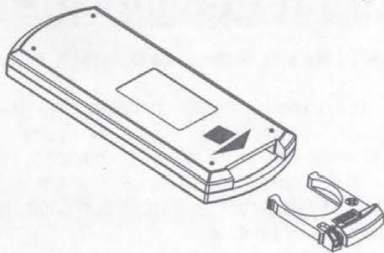


② Replacing the battery

 Put the battery in the case observing the polarity as illustrated.

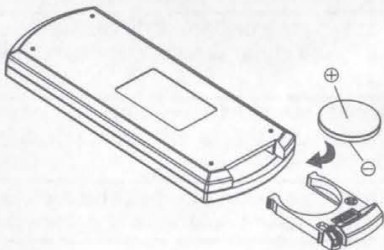

③ Close the battery tray

 Push the tray as illustrated until a click is heard.

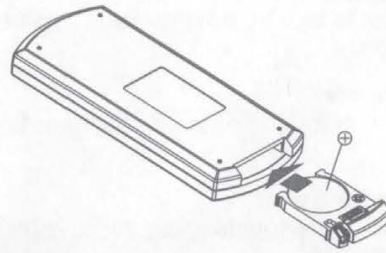

IN CASE OF DIFFICULTY

Problem	Cause	Solution
Remote Control Inoperative	Reverse placement of battery.	Place the battery correctly into its tray.
	Dead battery.	Replace the battery with a new one.
	Remote control not pointed toward the head unit.	Point the remote control directly toward your head unit.



Information on Disposal of Old Electrical and Electronic Equipment and Battery (applicable for countries that have adopted separate waste collection systems)

If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.



**ALPINE ELECTRONICS OF ASIA PACIFIC
CO., LTD**

555 Rasa Tower 1, Unit 2601-2602,
26th floor
Phaholyothin Road, Chatuchak
Bangkok 10900, Thailand
Tel. +662-937-0505

ALPINE ELECTRONICS France S.A.R.L.

184 allée des Erables
CS 52016 Villepinte
95 945 Roissy CDG cedex
FRANCE
Phone : + 33(0)1 48 63 89 89

ALPINE ELECTRONICS (CHINA) CO., LTD.

R2-4F, China Merchants Tower
No.116 Jianguo Street, Chaoyang District,
Beijing 100022, China
Phone: 86(10)6566-0308

ALPINE ELECTRONICS MARKETING, INC.

1-7, Yukigaya-Otsukamachi, Ota-ku,
Tokyo 145-0067, JAPAN
Phone: 03-5499-4531

ALPINE ELECTRONICS OF U.K. LTD.

Alpine House
Fletchamstead Highway, Coventry CV4
9TW, U.K.
www.alpine.co.uk

ALPINE ELECTRONICS OF AMERICA, INC.

19145 Gramercy Place, Torrance
California 90501, U.S.A.
Tel. 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS DE ESPAÑA, S.A.

Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

ALPINE ITALIA S.p.A.

Viale Cristoforo Colombo, 8
20090 Trezzano sul Naviglio MI, Italy
Phone +39 02 484781

ALPINE ELECTRONICS GmbH

Wilhelm-Wagenfeld-Str. 1-3,
80807 München, Germany
Phone 089-32 42 640

**ALPINE ELECTRONICS OF AUSTRALIA
PTY. LTD.**

161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200