



Revised
2.8.11

2360 Boswell Road
Chula Vista, CA 91914
Phone 619.216.1444
Fax 619.216.1474
E-Mail tech@explorerprocomp.com

PRO COMP SUSPENSION

Suspension Systems that Work!

Bill Of Materials

Part #	Description	Qty.
67971	TORSION BAR TOOL: w/ Threaded Pin	1

All part images may vary from catalog and instructions.

**PART# 67971
UNIVERSAL
TORSION KEY
UNLOADING
TOOL**

IMPORTANT!: *Clean and grease the torsion bar tool and threaded pin before each use.*

WARNING: *Be extremely careful when loading or unloading the torsion bars! There is a tremendous amount of stored energy in the bars. Keep your hands and body clear of the adjuster arm assembly and puller tool in case anything slips or breaks! Remember your safety glasses!*

Instructions:

1. Measure the torsion bar adjusting screw depth and record this dimension for later use on reassembly.

LEFT: _____ RIGHT: _____

2. Remove the torsion bar adjusting screw. Apply a small amount of lubrication grease to the puller threads and the puller shaft-to-adjuster arm contact point. Load the puller and torsion adjuster arm until the adjuster nut can be removed from the crossmember. Release the puller to unload the torsion bar. With the bar unloaded, slide it forward into the lower control arm until the adjuster arm falls free.

NOTE: *If the bar seems stuck, use a hammer and punch through the hole in the rear of the cross member to dislodge it.*

3. Repeat this procedure on the other side of the vehicle.
4. Reverse these steps for reinstallation.

