

400 W. Artesia Blvd.
Compton, CA 90220
Fax: (310) 747-3912
Ph: 1-800-776-0767
E-Mail: info@procompusa.com
Website: www.procompusa.com

Latest Revision Date:
1.17.23



PRO COMP SUSPENSION

62206
2.5" Level Lift Kit
2015-2023 Ford F-150 4WD

READ INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING INSTALLATION.

INSTALLATION BY A CERTIFIED PROFESSIONAL MECHANIC IS HIGHLY RECOMMENDED.

PRO COMP IS NOT RESPONSIBLE FOR ANY DAMAGE OR FAILURE RESULTING FROM IMPROPER INSTALLATION.

THIS DOCUMENT CONTAINS VERY IMPORTANT INFORMATION THAT INCLUDES WARRANTY INFORMATION AND INSTRUCTIONS FOR RESOLVING PROBLEMS YOU MAY ENCOUNTER. PLEASE KEEP IT IN THE VEHICLE AS A PERMANENT RECORD.

PART #	DESCRIPTION	QTY.
61-40161	.5IN COILOVER SPACER	2
61-40162	1.125IN PRELOAD SPACER	2
90-6638m	HARDWARE PACK	1
	10MM - 1.5 10.9 METRIC FLANGE NUTS	6

RECOMMENDED UPGRADES:

MAXIMUM TIRE SIZE: 315/70/17
RECOMMENDED RIM SIZE: 17 X 8.5 + 25
PRO-M FRONT SHOCK: PR2118
PRO-M REAR SHOCK: PR2119

INSTALLATION INSTRUCTIONS:

1. Position your vehicle on a smooth, flat, hard surface (i.e. concrete or asphalt). Block the rear tires and set the emergency brake.
2. Measure and record the distance from the center of each wheel to the top of its fender opening. Record below.


LF: _____ RF: _____

LR: _____ RR: _____



3. Place the vehicle in neutral. Place your floor jack under the front crossmember and raise the vehicle. Place jack stands under the frame rails and lower the frame onto the stands. Remove the jack and place the vehicle back in gear, set the emergency brake, and place blocks both in front and behind the rear wheels. Remove the front wheels.
4. Unbolt the front brake line bracket from the frame and ABS wire from the knuckle. Save **OE** hardware for reinstallation.
5. Unbolt and remove the sway bar end links from the vehicle. Save **OE** hardware for reinstallation.




6. Using the proper tool carefully separate the outer tie rod end from the knuckle. Remove the retaining nut and remove the outer tie rod end from the knuckle.

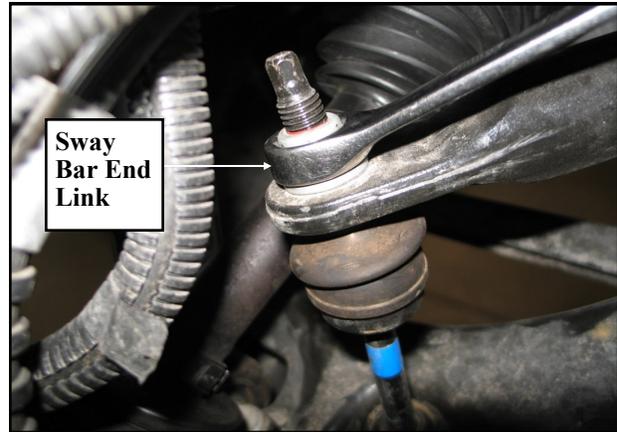


7. Remove the **OE** CV joint retaining nut.
8. Using the proper tool carefully separate the upper ball joint from the knuckle. Loosen but **DO NOT** remove the retaining nut from the upper ball joint.

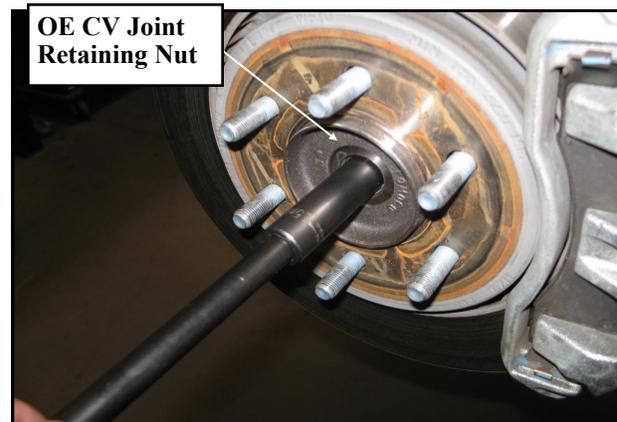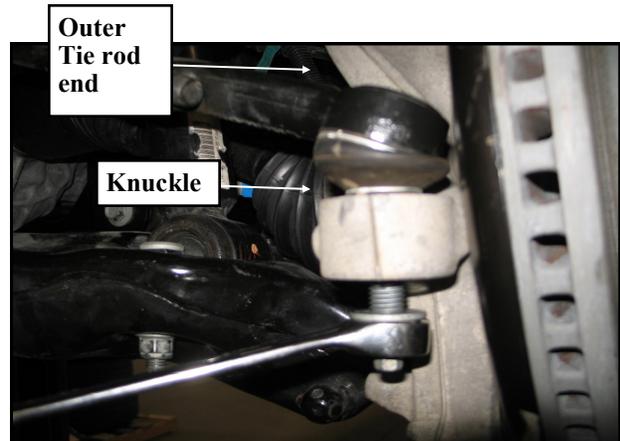


- Support the lower control arm with a jack and unbolt the lower coilover mounting bolts from the lower control arm mount.

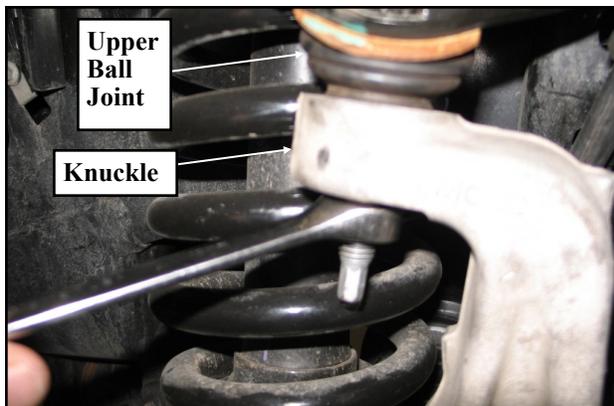

- Unbolt the (3) OE nuts on the upper shock mounting studs. Carefully remove the shock from the vehicle.

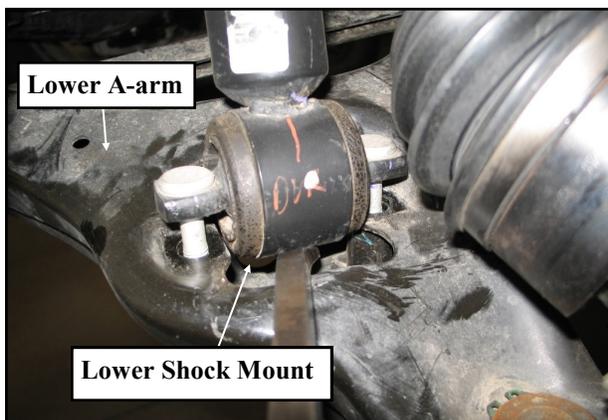

- Scribe an index mark on the top of the OE coil spring to the upper shock mount.

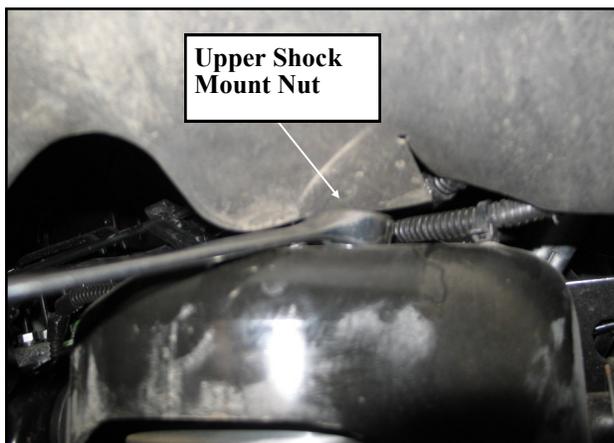

- Mark the orientation of the lower mount.

CAUTION: The coil is under extreme pressure and severe bodily injury may occur if the coil spring is disassembled without using a coil spring compressor.

- Compress the coil spring on the shock assembly with a suitable coil spring compressor so that the coil spring has about 3/8" play in the shock and remove the upper shock mount retaining nut.


NOTE: Do not use an impact gun to remove the retaining nut. It will damage the shock shaft.

- Remove the OE coil spring isolator from the upper shock mount. Save the isolator for reuse.


NOTE: Inspect the front shock assembly for any damage or fluid leakage. Replace if necessary.

- Carefully remove the coil spring from the shock.
- Insert the OE spring isolator into the supplied preload spacer (61-40162).


17. Reinstall the compressed coil spring onto the shock assembly using the reference marks as a guide.
18. Install the preload spacer (61-40162) assembly and OE upper shock mount using the OE retaining nut.

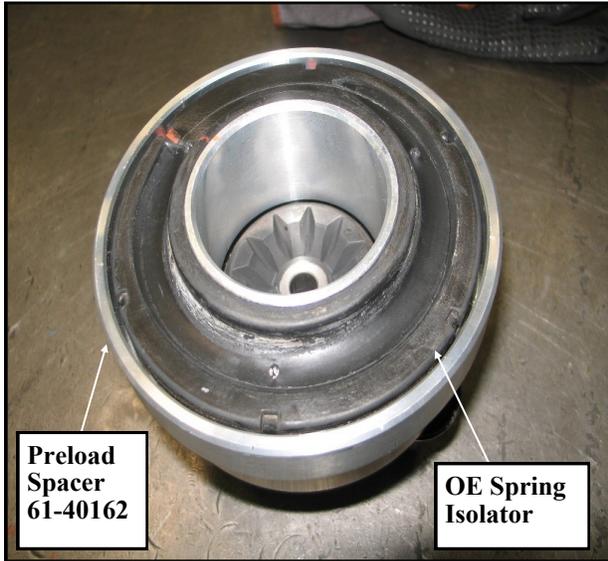


19. Torque the upper shock mounting plate retaining nut to 20 ft./lbs.
NOTE: Failure to properly tighten the upper shock mounting nut will result in suspension noise.

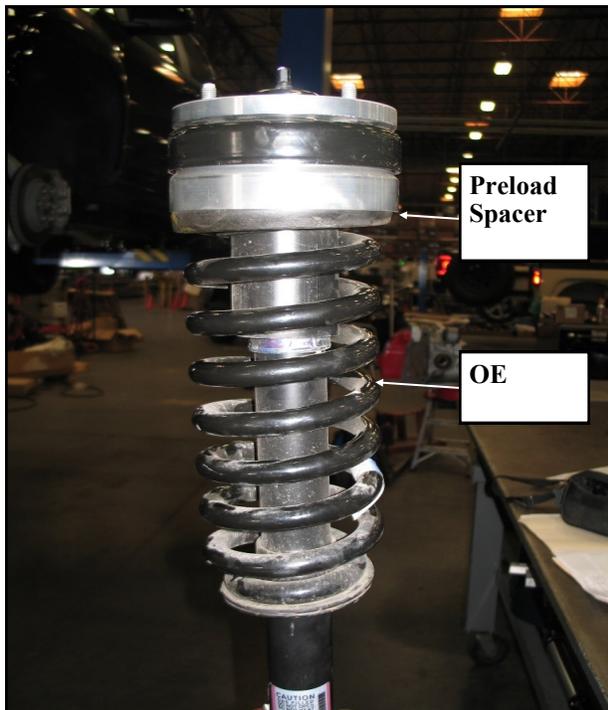

20. Decompress the coil spring on the shock assembly. Make sure that the spring is seated correctly into the shock assembly and aligned with the previously scribed index mark on the upper shock mounting plate.
21. Install the upper shock spacer (61-40161) onto the OE studs on the shock.
NOTE: Because this kit retains the use of the OE studs the vehicle can easily be returned to it's stock form.
22. Install the shock assembly into the shock tower and secure using the supplied 10mm flange nuts. Leave the nuts hand tight only at this point.
23. Reinstall the lower shock mount onto the lower control arm mount and secure using the previously removed OE hardware.
24. Torque the upper and lower shock mounting hardware to manufacturer's specifications.

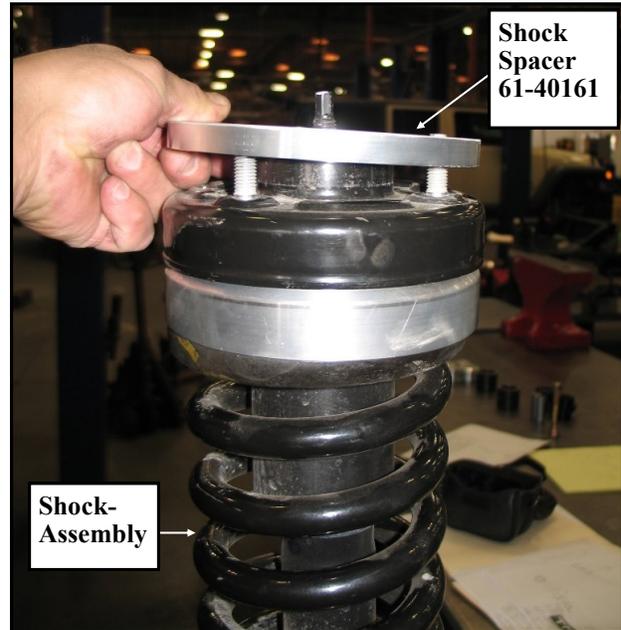

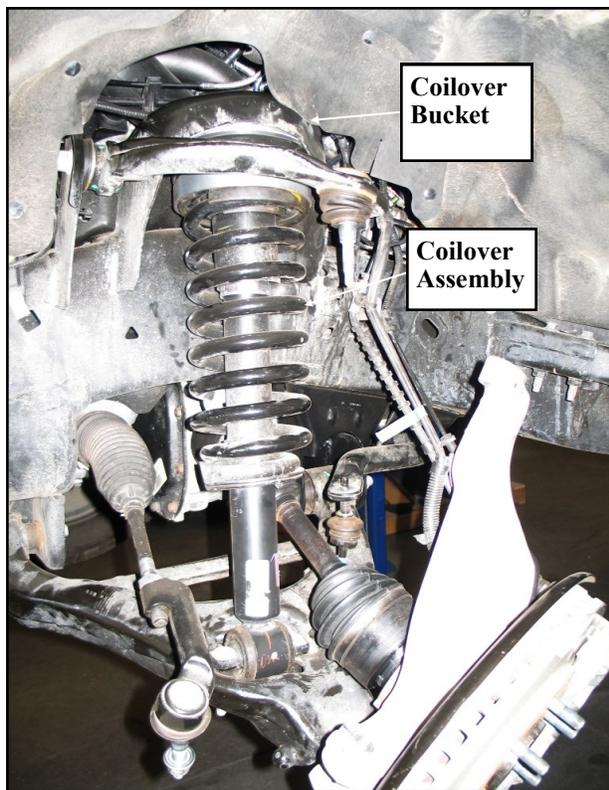

31. Repeat the steps 5 Through 29 On the remaining side of the vehicle.
32. Install the front tires/wheels and lower the vehicle onto the ground.
33. Torque all bolts to factory specifications. Re-torque all bolts after 500 miles.

IMPORTANT! BE SURE TO BRING THE VEHICLE IMMEDIATELY TO A REPUTABLE ALIGNMENT SHOP TO BE ALIGNED!

25. Slide the CV joint into the knuckle and reinstall the knuckle to the upper ball joint. Torque the upper ball joint nut to manufacturers specifications.

NOTE: It may be necessary to pry the upper control arm down, using a pry bar inserted into the coil spring, to force the ball joint stem into the spindle.

26. Reinstall the **OE** CV joint retaining nut. Torque according to manufacturer's specifications.
27. ***NOTE: Be sure the CV joint is properly installed or damage to the locking hub may occur.***
28. Reinstall the outer tie rod end to the knuckle. Torque the outer tie rod end nut to manufacturer's specifications.
29. Reinstall the sway bar end link to the lower control arm and secure top the sway bar. Torque according to manufacturer's specifications.
30. Reinstall the front brake line bracket to the frame and knuckle using the previously removed **OE** hardware.



Use this only as a guide for hardware without a called out torque specification in the instruction manual.

Bolt Torque and ID						
Decimal System			Metric System			
All Torques in Ft. Lbs. Maximums						
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 9.8	Class 10.9	Class 12.9
5/16	15	20	M6	5	9	12
3/8	30	45	M8	18	23	27
7/16	45	60	M10	32	45	50
1/2	65	90	M12	55	75	90
9/16	95	130	M14	85	120	145
5/8	135	175	M16	130	165	210
3/4	185	280	M18	170	240	290

1/2-13x1.75 HHCS
D T L X

Grade 5 Grade 8
(No. of Marks + 2)

G = Grade (Bolt Strength)
D = Nominal Diameter (Inches)
T = Thread Count (Threads per Inch)
L = Length (Inches)
X = Description (Hex Head Cap Screw)

M12-1.25x50 HHCS
D T L X

P = Property Class (Bolt Strength)
D = Nominal Diameter (Millimeters)
T = Thread Pitch (Thread Width, mm)
L = Length (Millimeters)
X = Description (Hex Head Cap Screw)

Safety Warning

MISUSE OF THIS PRODUCT COULD LEAD TO INJURY OR DEATH

Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control or vehicle rollover during abrupt maneuvers. Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death to driver and passengers.

Driver and passengers must ALWAYS wear your seat belts, avoid quick sharp turns and other sudden maneuvers. PRO COMP does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your vehicle under the influence of alcohol or drugs.

Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.

It is the responsibility of the retailer and/or the installer to review all state and local laws, with the end user of this product, related to bumper height laws and the lifting of their vehicle before the purchase and installation of any PRO COMP products. It is the responsibility of the driver/s to check their surrounding area for obstructions, people, and animals before moving the vehicle. All raised vehicles have increased blind spots; damage, injury and/or death can occur if these instructions are not followed.

Installation Warning

All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks.

Use caution during all disassembly and assembly steps to insure suspension components are not over extend-ed causing damage to any vehicle components and parts included in this kit.

Included instructions are guidelines only for recommended procedures and are not meant to be definitive. Installer is responsible to insure a safe and controllable vehicle after performing modifications.

PRO COMP recommends the use of an OE Service Manual for model/year of vehicle when disassembly and assembly of factory and related components.

Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual. Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.

Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual. Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.

SAEJ2492 Warning

By installing this product, you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than that of factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, allow more time and distance for braking, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.

Headlamp Warning

A lifted vehicle may have different headlight aim performance. PRO COMP recommends marking and recording the headlight beam position before kit installation and then adjusting, if necessary, the headlamps to the same height settings after kit installation. Set the vehicle on a level surface 10' to 15' from a solid wall or garage door. (This is a general distance with some manufacturers requiring different distances.) Note the top height of the low beam's bright spot, the top of the most intense part of the beam, for driver and passenger side. Height may vary from side to side. Repeat this procedure and adjust after lift kit is installed. Adjust if the aim is off by turning the adjusters gradually (a quarter of a turn) and looking to see where the new alignment falls. It may be easier to block one headlamp while adjusting the other. Consult the owner operation manual for procedures to adjust headlights - many automakers offer headlight aiming specs. Some states have their own specifications when it comes to headlight aim, so it's best to follow those rules

Final Checks & Adjustments

Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to ensure proper torque. Torque lug nuts to the wheel manufacturer specs. Move vehicle backwards and forwards a short distance to allow suspension components to adjust. Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance. Test and inspect steering, brake and suspension components for tightness and proper operation. Inspect brakes hoses and ABS lines for adequate slack at full extension, adjust as necessary.

RECHECK ALL HARDWARE FOR PROPER TORQUE VALUES AFTER 500 MILES, AND THEN PERIODICALLY AT EACH SERVICE INTERVAL THERAFTER.

Vehicle Handling Warning

Increasing the height of your vehicle raises the center of gravity and can affect stability and control. Use caution on turns and when making steering corrections.

Vehicles with larger tires and wheels will handle differently than stock vehicles. Take time to familiarize yourself with the handling of your vehicle.

Wheel Alignment/Headlamp Adjustment

It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician. Align the vehicle to factory specifications. It is recommended that your vehicle alignment be checked after any off-road driving.

In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment. If the vehicle is equipped with active or passive safety/collision monitoring and/or avoidance systems including, but not limited to, camera- or radar-based systems, check and adjust your vehicle's systems for proper aim and function.

PRO COMP will gladly answer any questions concerning the design, function, maintenance and correct use of our products. Please make sure your Dealer/Installer explains and delivers all warning notices, warranty forms and instruction sheets included with PRO COMP product.

Application listings in this catalog have been carefully fit checked for each model and year denoted. However, PRO COMP reserves the right to update as necessary, without notice, and will not be held responsible for misprints, changes or variations made by vehicle manufacturers. Please call when in question regarding new model year, vehicles not listed by specific body or chassis styles or vehicles not originally distributed in the USA.

Please note that certain mechanical aspects of any suspension lift product may accelerate ordinary wear of original equipment components. Further, installation of certain PRO COMP products may void the vehicle's factory warranty as it pertains to certain covered parts; it is the consumer's responsibility to check with their local dealer for warranty coverage before installation of the lift.

Warranty and Return policy:

PRO COMP warrants its full line of products to be free from defects in workmanship and materials. PRO COMP'S obligation under this warranty is limited to repair or replacement, at PRO COMP's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. PRO COMP is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of PRO COMP product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with PRO COMP or at any factory authorized PRO COMP dealer.



The PRO COMP PROMISE WARRANTY

At Pro Comp, we know you have many choices when selecting products to personalize your vehicle. You should demand nothing but the highest quality available and have total confidence that the products you selected are the best in the industry. It is for these reasons that Pro Comp Suspension products are backed by the best warranty in the industry...the Pro Comp Promise!

Pro Comp promises that its products will last a lifetime or we will replace it free of charge. It's that simple! Because of our commitment to quality and manufacturing excellence, we are able to stand behind our products. FOREVER.

It is Pro Comp's Promise that if one of our suspension products breaks not due to misuse, neglect or vandalism, we will replace it. Whether you are the original purchaser or not, you can be assured that we will make it right. The Pro Comp Promise covers all suspension products including shocks and steering stabilizers. Buy Pro Comp Suspension today and enjoy it for the rest of your life!

That's our Pro Comp Promise!

Notice to Owner, Operator, Dealer and Installer:

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure that the Dealer / Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

Warranty and Return Policy:

Pro Comp warrants its full line of products to be free from defects in workmanship and materials for the life of the product. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

IMPORTANT! To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty:

* Parts subject to normal wear; this includes bushings, bump stops, ball joints, tie rod ends and heim joints.

* Finish after 90 days.

* Damage caused as a result of not following recommendations or requirements called out in the installation manuals.

Pro Comp Monotube coil-over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges. Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance or improper use of our products.

E-Mail: info@procompusa.com
Website: www.procompusa.com
Fax: (310) 747-3912
Ph: 1-800-776-0767

<u>PLACE</u> WARRANTY REGISTRATION <u>NUMBER</u> HERE: _____

Revision Page:

10.5.22: Model Year Fitment Updated

11.2.22: Template Format Updated

1.17.23: Model Year Fitment Updated