

Fog Lamp Instructions

15 GMC Sierra HD/14 GMC Sierra LD/15 Silverado HD

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


Table 1.0

KIT CONTENTS:	
Description	Qty.
4" Round Puck with Wiring Harness	2
3/8" Stainless Steel Spacer Washer	2
Mounting Bracket	2
10-32 X 3/8" Machine Screw	4
#10 Lock Washers	4
#10-32 X 1" Slotted Screws	4

Tools Needed:

- T15 Torx Socket
- Ratchet Wrench
- Phillips screwdriver

Before Installation Verify that all contents listed are included in your kit

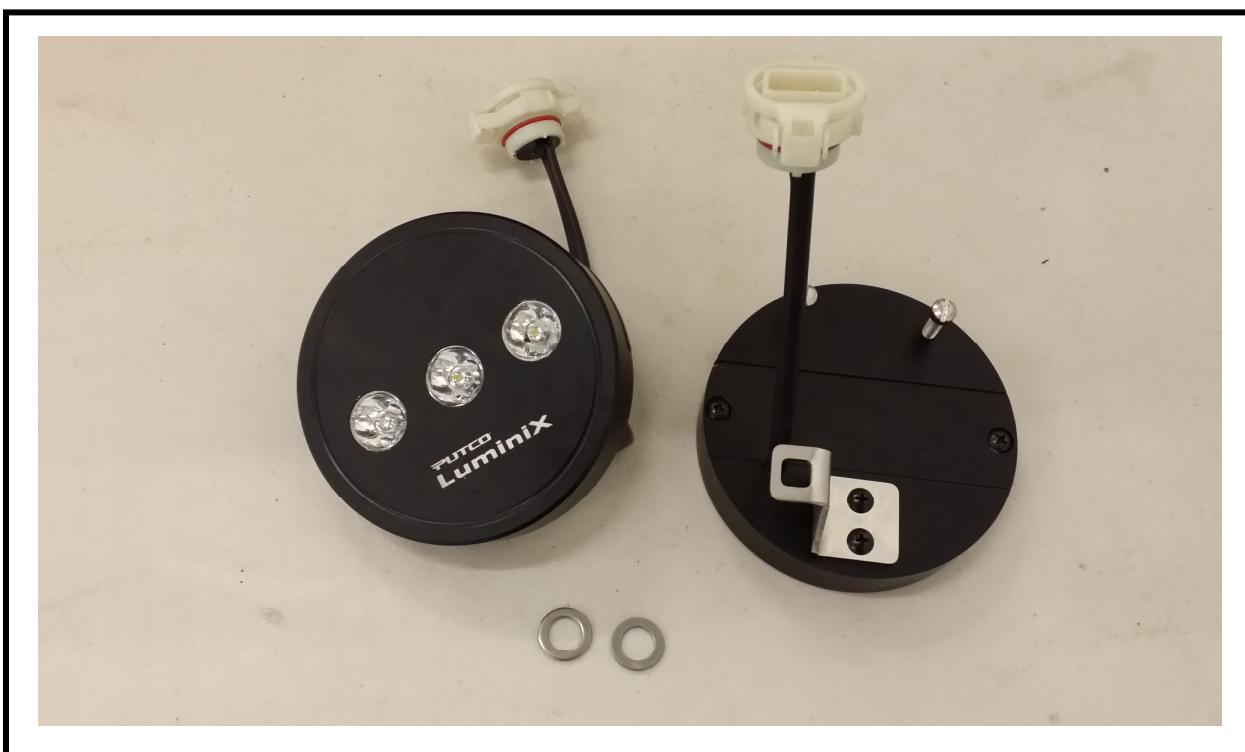

LIMITED 2 YEAR WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

Fog Lamp Removal


1. Remove a minimum of 5 lower T15 torx headed screws that hold the inner fender well to the vehicle. Carefully pull fender well away from fender to gain access to Fog Lamp cavity. Refer to Figure 1



2. Disconnect factory wiring harness from the back of the fog lamp . Refer to Figure 2



3. Use a Phillips Screwdriver to apply enough pressure to pop out the three mounting pins that secure the fog lamp to the plastic housing. Refer to figure 3

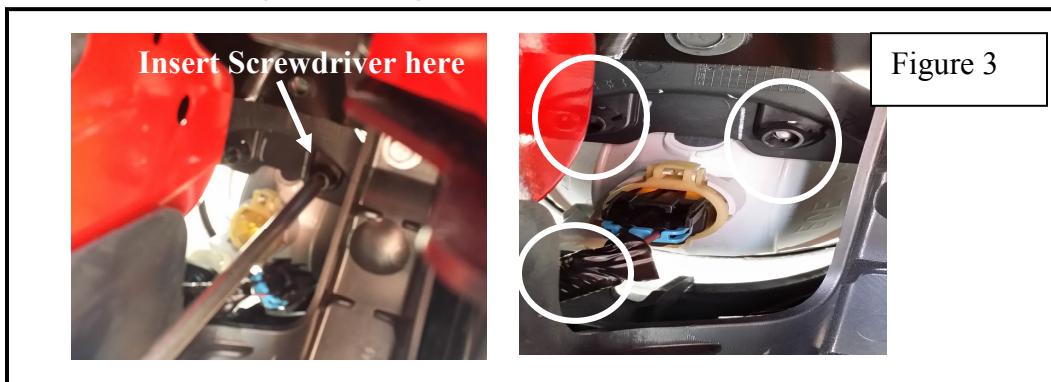

LIMITED 2 YEAR WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

4. Remove fog lamp assembly and set aside for next step as some parts are reused.

Fog Lamp Assembly

1. Remove Putco fog lamps from packaging. Check to see if all parts from Table 1.0 are included
2. Install stainless steel brackets on both fog lamps using 4 - 10-32 X 3/8" screws and locks provided (2 per lamp).
3. Remove adjusting hardware from the original Fog Lamps and reassembly onto new Putco fog lamps. Refer to Figure 4



Fog lamp Installation

1. Connect Factory wiring harness to Putco Fog lamp. Ensure connectors are fully seated and can not be pulled back off. Turn on fog lamps to verify everything is working properly
2. Verify that the three black retainers are still installed in the factory mounting bracket of the vehicle.
3. Align the fog lamp so that the adjuster bracket is down and the three mounting posts align with the vehicle's mounting bracket.
4. Using firm pressure press the fog lamp into the three retainers. Ensure all three mounting posts are fully seated and can not be pulled back out easily.
5. Turn on fog lamps to verify everything is working properly
6. Adjust the angle of the fog lamps by turning the adjusting screw from the backside of the fog lamp in the inner fender well.
7. Reinstall the inner fender well screws

LIMITED 2 YEAR WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.