

## Fog Lamp Instructions

07-13 GMC Sierra LD/07-14 GMC Sierra HD

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: 1-800-247-3974  
 Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)  
 Contact your PUTCO dealer for other quality accessories.

**Please read all instructions before installation and to check to see that all parts are included.**

**Table 1.0**

KIT CONTENTS:	
Description	Qty.
5 1/2" Round Puck with Wiring Harness	2
3 Inch 10-32 Screw	4
3/8" 10-32 Screws	4
3/8" Lock Washers	4
RH Adjuster Bracket	1
LH Adjuster Bracket	1
3/8" Stainless Steel Spacer Washer	2

### Tools Needed:

- Phillips screwdriver
- Slotted screwdriver

**Before Installation Verify that all contents listed are included in your kit.**



**LIMITED 2 YEAR WARRANTY**

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

## Fog Lamp Removal

1. From the front of the Fog Lamp apply pressure from side to side until two of the three clips come loose. Pull Fog lamp straight out to release the third clip. Refer to Figure 1.




2. Disconnect factory wiring harness from the back of the fog lamp . Refer to Figure 2.



3. Remove fog lamp assembly and set aside for next step as some parts are reused.

## Fog Lamp Assembly


1. Remove Putco fog lamps from packaging. Check to see if all parts from Table 1.0 are included.
2. Install two 3 inch bolts and Adjuster Brackets with provided 10-32 screws and lock washers on both pucks.  
Note: There is a LH and RH adjuster bracket that has to be installed on the correct side. Refer to Figure 3.

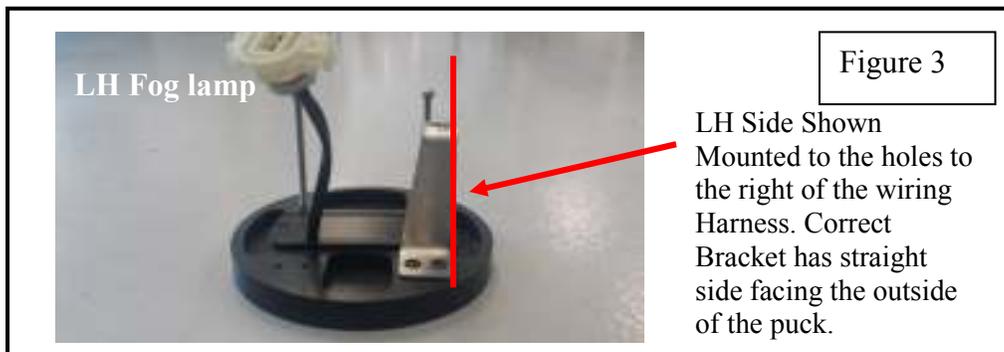

### LIMITED 2 YEAR WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

3. Remove adjusting hardware from the original Fog Lamps and reassembly onto new Putco fog lamps using the supplied spacer washer. Refer to Figure 4.

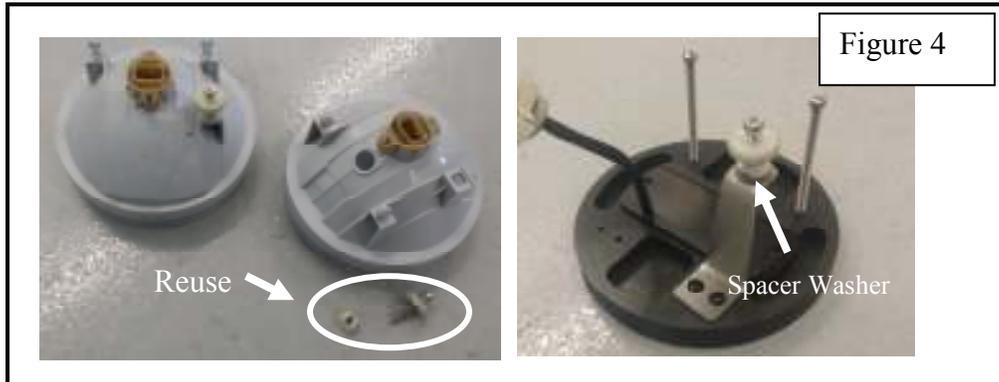

## Fog Lamp Installation

1. Connect factory wiring harness to Putco fog lamp. Ensure connectors are fully seated and can not be pulled back off. Turn on fog lamps to verify everything is working properly.
2. Verify that the three black retainers are still installed in the factory mounting bracket of the vehicle.
3. Align the fog lamp so that the adjuster bracket is down and the three mounting posts align with the vehicle's mounting bracket.
4. Using firm pressure press the fog lamp into the three retainers. Ensure all three mounting posts are fully seated and can not be pulled back out easily.
5. Turn on fog lamps to verify everything is working properly after installation.
6. Adjust the angle of the fog lamps by turning the adjusting screw from the backside of the fog lamp in the inner fender well.

### LIMITED 2 YEAR WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.