



INSTALLATION INSTRUCTIONS
ATV Plow Wear Bar UHMW 48" 54" 60"
Part Number: 67860, 67861, 67862
Application: ATV Snow Plow

II. Tools Required

- Wrench: 9/16"

III. Installation

1. Remove the metal wear bar from the front of the plow, with the use of a 9/16" wrench.
2. Install the UHMW wear bar, attach with the supplied hardware, and torque down to 18 ft-lbs.

I. Parts List

<u>Ref</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
1	*	UHMW Wear Bar	1
2	6779	Nut Lock Insert 3/8"	7~9**
3	67859	Carriage Bolt 3/8"-16 X 1.5"	7~9**

* Indicates Part Number 67860, 67861, 67862

** Indicates For 60" Plow Only



Figure 1.

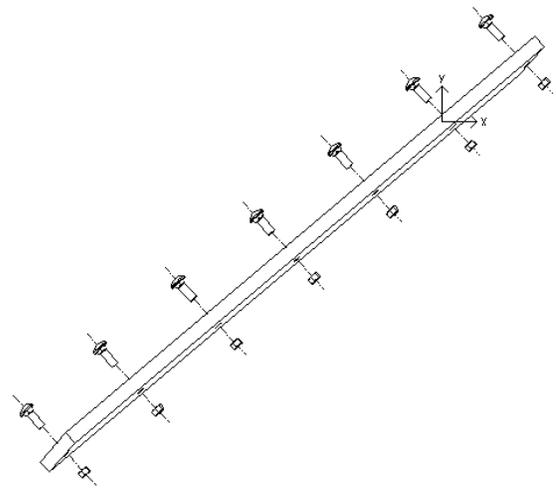


Figure 2.

Note: UHMW will be black lighter color shown for photo only.

UHMW Wear Bar installation is now complete and should look like figure 2.