




Protecting Your Adventure Lifestyle

Warrior Products, Inc.
16850 SW Upper Boones Ferry Rd
Ste. A
Durham, OR 97224
Phone (888) 220-6861
Fax (503) 692-0364
sales@warriorproducts.com

SUBJECT: *Installation Instructions, S3002 FJ Cruiser Rear Flares*

Before you begin this installation, you will need a few basic supplies. Only basic hand tools are required, and you will need some protective tape such as blue painter's tape. A molding removal tool may make some of this installation a bit easier. Also, be aware that you may damage your retainer clips during removal of these outer molding pieces, so you may need replacements from your local dealership.

1. Your first step will be to remove the factory flare. This figure shows you the attachment points. You will notice that the rear most attachment points are behind the rear bumper cover. You will need to get the sides of the rear bumper loose to access this, or you can choose to completely remove the front bumper.
2. Your new flare will attach to the vertical holes in the lip that are on the underside of the fender. Make sure these holes are clear of any plastic clips that may have not come out during removal.
3. Now loosely bolt your steel flare into place using the supplied hardware. For now, one bolt on each end and one in the middle should do. We are just mocking it into place and you will be removing it again, so it is not necessary to put every bolt in place.
4. With the flare in place, use your protective tape to create an outline of the top edge of the flare on the vehicles fender. This is going to be your reference line onto which you will install the supplied P-shaped trim.
5. With the tape outline in place, remove the flare and locate your P-Trim. The trim will install to the fender with the top of the P directly under the edge of your tape line. You may need to make some pie cuts in the flat part of the P in order to help turn the corners as the flare turns down the side.
6. With the P-Trim in place, you can now bolt your flare into place. Start by bolting it in loosely and put inward pressure on the flare as you tighten.
7. Re-install your bumper, or re-secure the outer portions of it depending on how you proceeded in step 1.

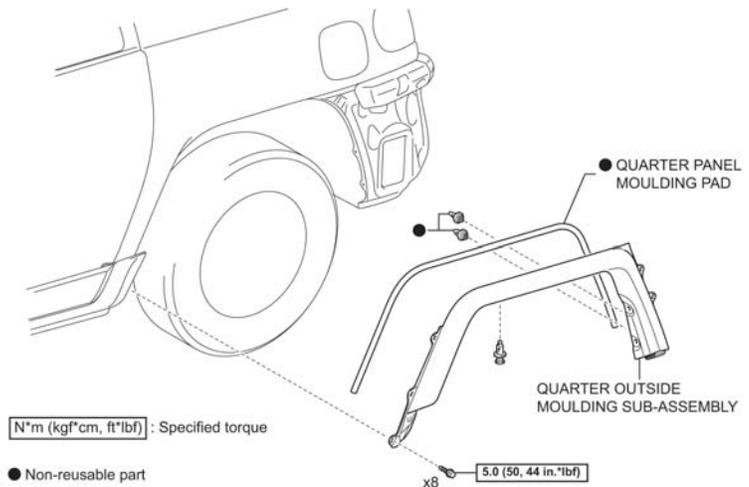

For more information on other accessories for your FJ Cruiser, visit us online at www.warriorproducts.com