

315, 415, 320, & 420 Console Installation Instructions 1976-1995 CJ & Wrangler

<u>Included Components</u>	<u>Quantity</u>	<u>Required Tools for Installation</u>
1. Console	(1)	1. Electric Drill
2. Mounting Bracket	(1)	2. 1/8" Drill Bit
3. 14 X 1 3/4" Screw	(3)	3. 3/16" Drill Bit
4. 8 X 3/4" Screw	(6)	4. Phillips Screw Driver

Important Information

- Please refer to Section 1 on pages 1-3, for the Jeep® CJ-7 and Wrangler ONLY.
- Please refer to Section 2 on Page 4, for the 1976-83 Jeep® CJ-5 ONLY.

Section One Installation Instructions for the Jeep CJ-7 and Wrangler ONLY

1. Place between the Driver/Passenger seats (Figure 1).
2. **NOTE:** The installation of the Mounting Bracket is not required for the 76-83 CJ-5. Place the Mounting Bracket under the rear of the Console with the legs of the Mounting Brackets level to the floor (Figure 2).



Figure 1

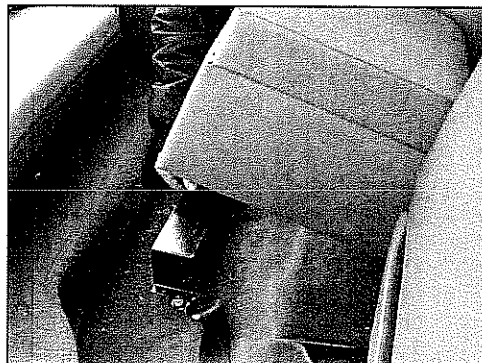


Figure 2

3. Place the Console to ensure that it does not obstruct the shifter in all gears (Figure 3).
4. Use a pen to mark the position of the Mounting Bracket on the bottom of the Console (Figure 4).

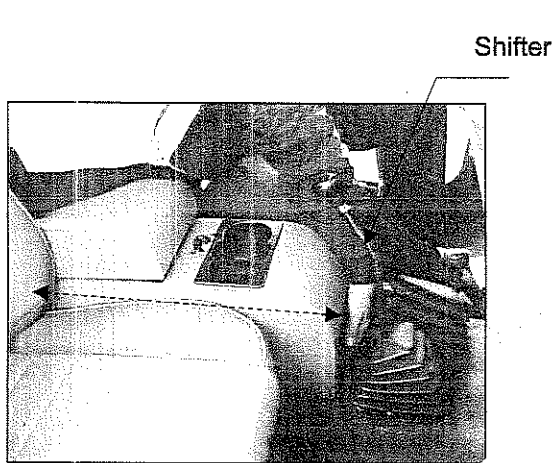


Figure 3

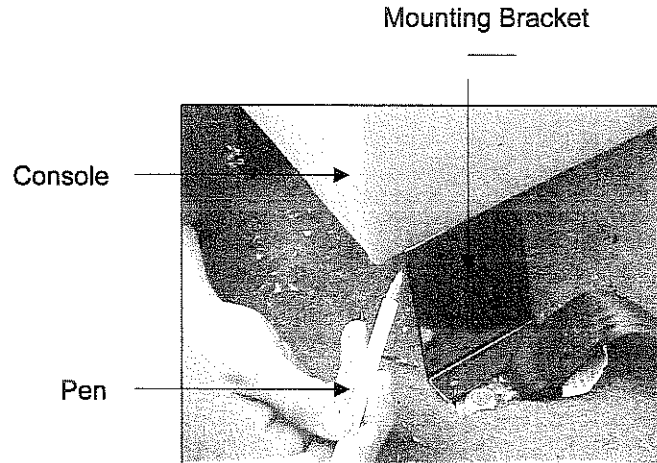


Figure 4

5. Once the position is marked, remove the Console from the vehicle.
6. Position the Mounting Bracket over the marks previously made in Step 4.
7. Attach the Mounting Bracket to the Console using the (2) 8 X 3/4" Sheet Metal Screws provided (Figure 5).
8. Position the Console between the Driver and Passenger seats.
NOTE: Position the Console without interfering with the shifter.
9. Locate the (4) mounting holes on the Mounting Bracket.
10. Using the mounting holes as a drilling guide, drill (4) holes through the floor of the vehicle using 1/8" drill bit (Figure 6).



CAUTION: Take care not to cut or trip any wires/lines that might be in the area.

11. Attach Console and Mounting Bracket to the floor of the vehicle using the (4) 8 X 3/4" Sheet Metal Screws provided.

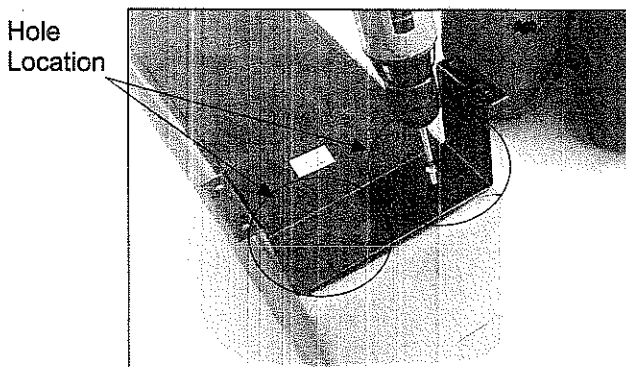


Figure 5

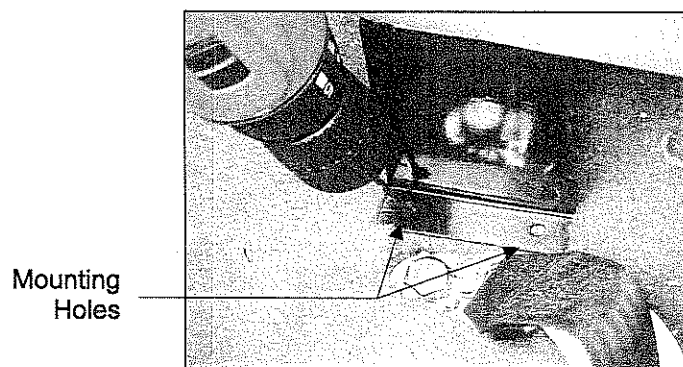


Figure 6

12. Remove the Cup Holder to expose the inner front section (Figure 7).

Note:

If the Console is a "C" version with a lined pocket where the cup holder is:

On a 415C version - Remove the Sun Glass Holder (proceed to step 13)

On a 420C version – Open the Armrest and mount as far forward as possible under the Padded Armrest through the bottom of the console (proceed to step.13)

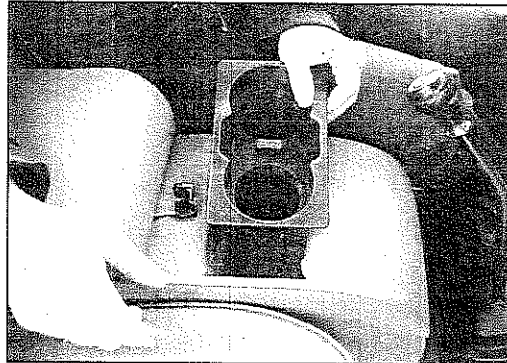


Figure 7

13. Drill one hole in the center and as far forward as possible through the bottom of the Console and the floor of the vehicle using a 3/16" drill bit (Figure 8).

14. Secure using (1) 14 X 1 3/4" Sheet Metal Screw provided.

NOTE: For more support you can take the option to install (2) Sheet Metal Screws in the front of the console.

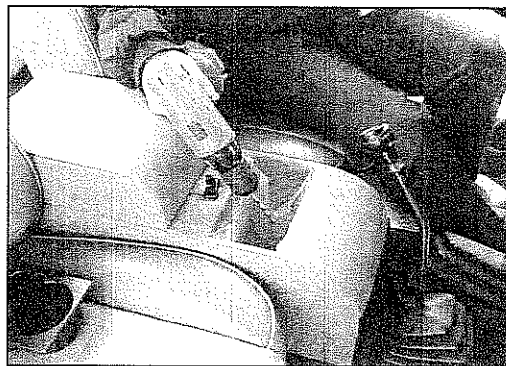


Figure 8



Ensure that all Screws are securely fastened to the vehicle prior to traveling.

Section Two Installation Instructions for 1976-83 Jeep CJ-5 ONLY.

1. Position the Console in the desired position between the Driver and Passenger seats as shown in Figure 1.
2. Place the Console to insure that the shifter has clearance when in all gears and is not obstructed by the Console's position (Figure 2).
3. Drill (2) holes through the rear of the Console and floor of the vehicle using 3/16" drill bit.

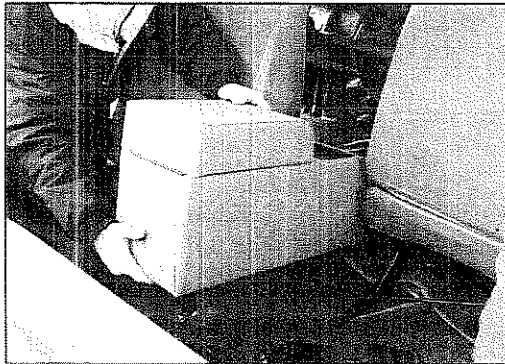


Figure 1

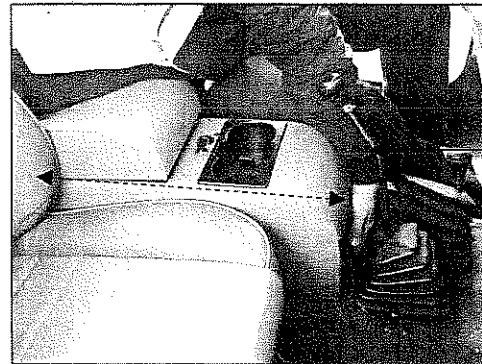


Figure 2



CAUTION: Take care not to cut or trip any wires/lines that might be in the area.

4. Secure the Console to the floor of the vehicle using the (2) 14 X 1 3/4" Sheet Metal Screws provided.
5. Remove the cup holder to expose the inner section (Figure 3).
6. Drill one hole in the center and as far forward as possible through the bottom of the Console and the floor of the vehicle using a 3/16" drill bit (Figure 4).
7. Secure using (1) 14 X 1 3/4" Sheet Metal Screw provided.
NOTE: You have the option to install (2) 14 X 1 3/4" Sheet Metal Screws instead of (1).

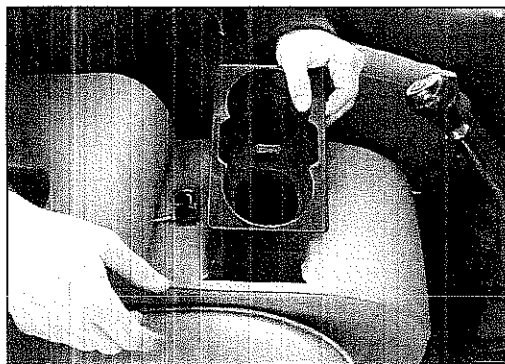


Figure 3

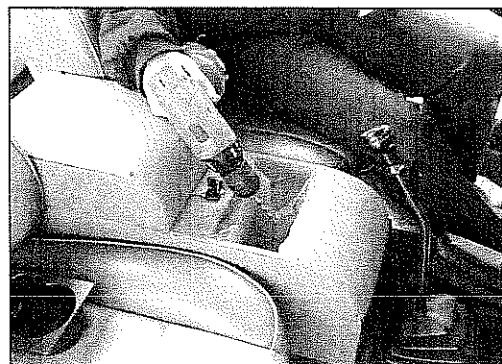


Figure 4



STOP **Ensure** that all Screws are securely fastened to the vehicle prior to traveling.

LIMITED 30 DAY WARRANTY:

Applies to Vertically Driven Products ®

Vertically Driven Products ® warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 30 DAYS from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts or labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. Dated bill of sale), specification of defect(s) to the place of purchase or freight pre-paid to the Company address listed below.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or by acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 DAYS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Vertically Driven Products ®
1375 Gladys Avenue
Long Beach, California 90804
562-438-5112
Made in China